



HOT WATER DISPENSER INSTRUCTIONS

DIRECTIONS FOR USE

1. To open Cover, raise Cover Release Lever and lift gently.
2. Fill Water Tank with fresh cold water.
3. Do not fill above the "MAX" mark.
4. Always maintain water level above "REFILL" mark.
5. Do not splash water on the control panel.
6. Close Cover firmly, Cover will click into position.
7. Connect Power Cord to water Dispenser then plug into wall outlet. Turn Master Switch to "ON" position.
8. "BOIL" Indicator Light will be on till water is boiled. NOTE: The "UNLOCK" Indicator Light will light up, but go out after 5 seconds.
9. When water has boiled, the "BOIL" Indicator Light will go out and the "KEEP WARM" Indicator Light will go on.
10. Master Switch - "ON" to use either of the 2 pumps, "OFF" to keep water hot, only Manual Pump will operate. Water will keep hot for approx. 15 hours.

IMPORTANT SAFETY INSTRUCTIONS

- Do not touch hot surfaces of unit. Do not touch or cover steam vents. Always use handles when lifting appliance.
- **EXTREME CAUTION** must be used when moving an appliance containing hot liquid.
- Do not immerse cord, plugs or the appliance in water or any other liquid.
- Have close supervision when children are present.
- Do not open Cover during boiling cycle. This may result in scalding!
- Do not tilt or knock appliance, hot water may spill out.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Unplug unit when not in use or for cleaning. Allow time to cool before opening.
- Always attach plug to appliance first, then plug cord into wall outlet.
- Do not use if cord or appliance are damaged.
- **DO NOT** use any other liquids except water in this unit!