

Panasonic®

Operating Instructions 使用说明书 Manuel d'utilisation

Hot Water Dispenser
电子保温热水瓶
Distributeur d'eau chaude

Household use only
家庭用

Usage domestique uniquement



Model No./ 型号/
N° de modèle **NC-EG4000**
NC-EG3000
NC-EG2200

Thank you for purchasing the hot water dispenser, NC-EG4000 / NC-EG3000 / NC-EG2200. Before using this product, please read these instructions completely. Pay particular attention to the "Important Safeguards" on pages 4 and 5. Save this manual for future use. This product is intended for household use only.

承蒙您购买NC-EG4000 / NC-EG3000 / NC-EG2200型号的电子保温热水瓶，衷心感谢。使用本产品之前请通读使用说明书。请特别注意第6页和第7页的“重要的安全措施”。妥善保管本说明书，以供将来使用。本产品只限家庭使用。


Merci d'avoir arrêté votre choix sur un distributeur d'eau chaude, NC-EG4000 / NC-EG3000 / NC-EG2200.

Lire l'intégralité de ces instructions avant d'utiliser ce produit. Accorder une attention particulière aux « Précautions importantes » en pages 8 et 9. Conserver ce manuel pour une utilisation ultérieure. Pour usage domestique seulement.

⑥

How to Use

How to Use

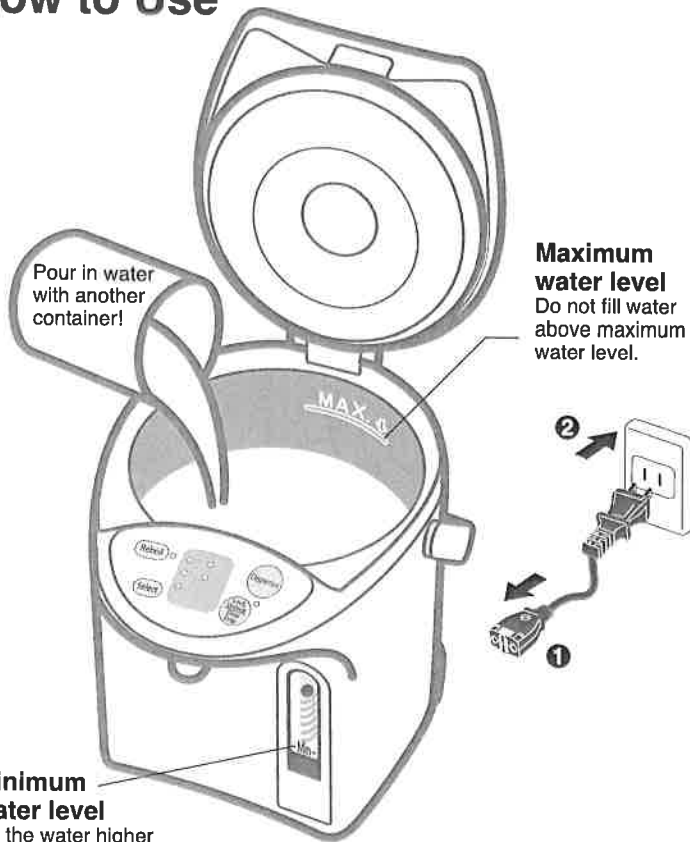

Boiling water

Dispensing
(Electric dispense)

Before you use this unit for the first time

- 1** Pour in water with another container to the maximum level.
- 2** Close the lid securely.
- 3** Boil the water until Reboil light goes out.
- 4** Dispense the hot water.
- 5** Unplug and remove the lid.
- 6** Pour out any remaining hot water slowly via the DRAIN mark.

How to reduce the chlorine in the water

Press **Reboil** key to make the indicator light flash. (Long Boil mode)

(Press one time while water is being boiled, and press twice while water is being kept warm.)

Extends the boiling time by about 6 minutes to reduce the chlorine by about 80% in the water.

- Press **Reboil** key again to boil.

Pour in water with another container. Close the lid securely.
Securely plug the body plug horizontally into the body.
Plug into wall outlet. (P.16 ①→②)




Starts boiling automatically.



Indicate as below when boiled.



The temperature will drop to approximately 190°F and the unit switches to keep-warm function automatically.

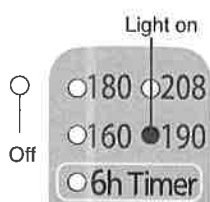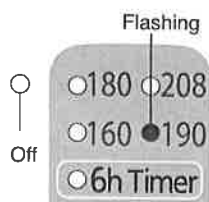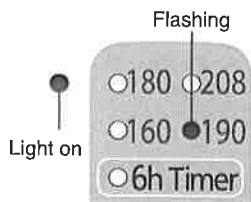


(Displayed temperature is indicative.)

Time required to boil water

NC-EG4000: approx. 35 min / NC-EG3000: approx. 27 min / NC-EG2200: approx. 20 min
 (Amount of water: Maximum Water / Room temperature: 68°F (20°C))

 Press key to release lock. The indicator light beside the key will light up.



Press key to dispense the hot water.

Press key twice for slow drip. The indicator light beside the key will flash. (See "slow drip" on P.18-19)




The key will automatically lock again 10 seconds after dispensing hot water.



When the unit is not in use

Unplug, and remove the lid. Pour out any remaining hot water slowly via the **DRAIN** mark.

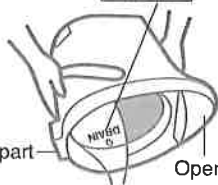


Cautions

- Do not pour out water too swiftly. (If water splashes over lid release part or operation panel, it may cause a malfunction.)
- Do not leave water in the inner container. (It may cause the container to corrode or smell.)

Convenient use methods

Convenient use methods

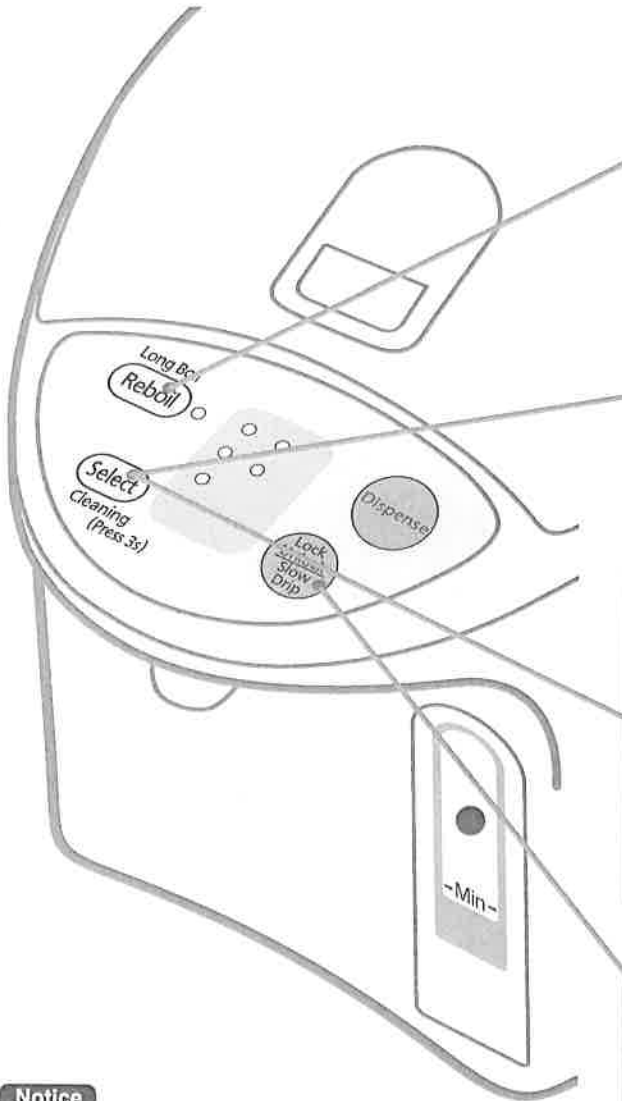

Reboil

- It is ideal to use boiling water for making coffee / tea / instant cup noodle etc.

Keep-warm function

- "180 keep-warm" is an ideal mode for making green tea.
- "160 keep-warm" is an ideal mode for making milk for a baby. Be sure to leave milk to cool down or mix it with cool boiled water before giving it to a baby.

- When the unit will not be used for a short time, such as when you go out for a day...

Setting the 6h timer

- While setting the timer, the electrification of heater stops.


Slow Drip mode for making drip coffee

- Dispense water slowly.
- Right after boiling, it maybe difficultly dispensed or be dispensed unsteady.

Notice


- The keep-warm temperature or the timer can be set while the water is being boiled or being kept warm.
- After power is restored in the event of a power failure, the keep-warm temperature will be automatically set to "190", even if the timer or the "208", "180" or "160" keep-warm function was previously selected.

Press **Light on (Reboil)** key to **reboil water that is being kept warm.**
 After a few minutes, water will be boiled.
 • The keep-warm temperature setting is left unchanged.

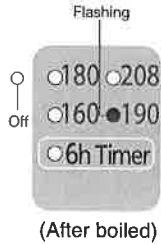

Time required for the reboil procedure
 From 208 keep-warm: approx. 2.5-4 min
 From 190 keep-warm: approx. 4-6.5 min
 From 180 keep-warm: approx. 6-12 min
 From 160 keep-warm: approx. 7-14 min
 (Amount of water: Maximum
 Room temperature: 68°F (20°C))

Press **Select** key.
 Each time the key is pressed, "●" mark will shift to the next choice and change the keep-warm temperature or set the timer.

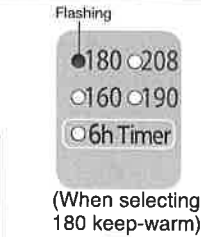

Time required to reach the settled keep-warm temperature
 190 → 208 keep-warm: approx. 2-4 min
 190 → 180 keep-warm: approx. 0.5-1 hour
 190 → 160 keep-warm: approx. 1.5-2.5 hours
 (Amount of water: Maximum
 Room temperature: 68°F (20°C)
 Previous keep-warm setting: 190°F)

After a short time, water will be kept warm at approximately 180°F.



6 hours later, timer will turn off and water starts boiling
 When the water is brought up to boiling temperature, it will be kept warm at 190°F.

Press **Lock/Unlock/Slow Drip** key twice, then press **Dispense** key to make drip coffee.

- Automatically locked in 30 seconds after dispensing is finished.
- To dispense hot water again, press **Dispense** key before time count up to 30 seconds.
- The **Dispense** key will automatically lock again in 10 seconds if **Dispense** key is not pressed.

Each time **Lock/Unlock/Slow Drip** is pressed, function will be switched as below.

